

On the sticker you will find the version you have in the box.



The box contains:

- 1 ED1608 device, packed in a antistatic bag with an IMEI number
- 1 Battery
- 1 Enclosure (1 cover and 1 bottom)
- 4 Torx screws, characterized by a 6-point star-shaped pattern
- 4 Washers
- 2 pieces of foam




Step 1: Open the antistatic bag and put the IMEI sticker on the enclosure where it is legible.

Step 2: Stick 1 piece of foam in the back of the enclosure. The other one is on the processor of the PCB.



Step 3: Connect the battery as picture below. *Note: please do this carefully and in the correct connector (J1)! To check: you will see the LED blink.*

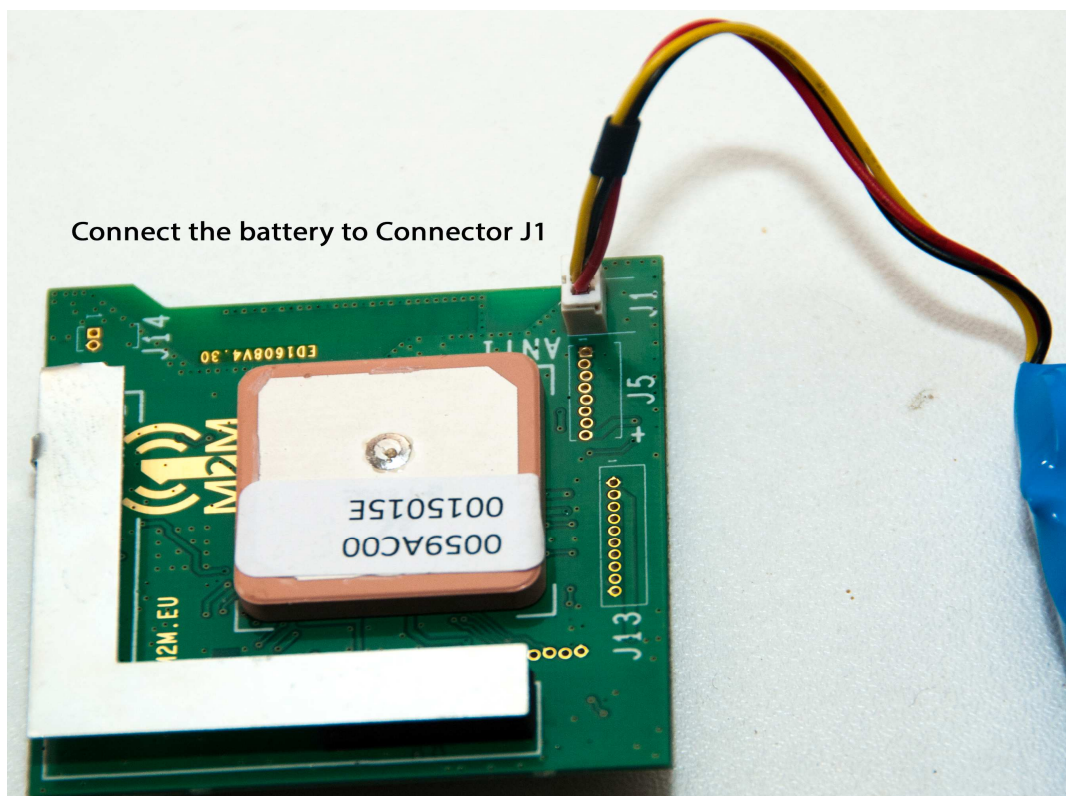

Step 4: Put the ED1608 PCB in the enclosure, fold the battery on top and close the enclosure.

To check: on the side of the enclosure you will see the LED blink.





Step 5: Place the washers in the holes of the bottom of the enclosure and put the torx screws in the enclosures. Now you can tighten the enclosure.



